

GENERAL SAFETY WARNINGS — MACK DRUM SMOKERS

- This appliance is intended for outdoor use only.
- Do not store or use gasoline or other flammable liquids within 10 feet (3m) of the smoker.
- Keep combustible materials at least 24 inches away from the smoker.
- The smoker becomes extremely hot during operation. Use caution when handling.
- Never leave the smoker unattended while in use.
- Keep children and pets away from the smoker while operating or cooling down.
- Do not wear loose clothing when operating the smoker.
- Do not lean over the smoker when opening the lid.
- Clean grease and ash buildup regularly to reduce fire risk.
- In case of a grease fire, close all air intakes and keep the lid closed until the fire goes out. Do not use water.
- Allow the smoker to cool completely before moving or transporting.
- Do not move the smoker while it is hot or in operation.
- Always operate the smoker on a stable, non-combustible surface.
- Leaving the lid open with live coals can cause extreme temperatures that may damage the powder-coated finish.

LIMITED WARRANTY

Mack Drum Smokers warrants this product to be free from defects in materials and workmanship under normal use and maintenance. This warranty does not cover damage caused by misuse, improper operation, modification, lack of maintenance, or overheating.

Damage to the powder-coated finish caused by excessive temperatures, leaving the lid open for extended periods, or improper airflow management is not considered a manufacturing defect and is not covered under warranty.

Liability is limited to repair or replacement of defective components at the discretion of Mack Drum Smokers.

DO NOT LEAVE THE LID OPEN WITH LIVE COALS

Extreme heat may damage the powder-coated finish.
Damage caused by overheating is **not covered under warranty**.

- Failure to follow these safety guidelines may result in property damage, personal injury, or fire.